



Impactor
00-1193-006-00

Assembly/Disassembly
Instructions



Disassembly Instructions for Impactor

1. Unscrew the Impactor Nose **2** out of the Impactor **1**.
2. End of disassembly.

Assembly Instructions for Impactor

1. Thread the Impactor Nose **2** into the Impactor **1** until it is fastened completely.
2. End of assembly.



97-0000-502-00 1003-T33 Printed in USA ©2010 Zimmer, Inc.